

HOW TO CONFIGURE THE CHERRY PS2 7000 AND 8000 KEYBOARD

Note: Be sure you use only the numbers above the letters. DO NOT use the numeric keypad for number entry.

1. Open up MS-DOS.
2. Enter Programming Mode: Hold down all 6 keys at the same time: Shift left, Alt left, and Ctrl right.
3. Until you hear 2 beeps. The computer screen will display MENU ENTRY.

Enable Track 1 Reading:

Press J

Press 1

Press Y

Enable Track 2 Reading:

Press J

Press 2

Press Y

Disable Track 3 Reading:

Press J

Press 3

Press N

Disable Track 4 Reading:

Press J

Press 4

Press N

Define and Enable Track 1 Header:

Press V

Press 5

Press %

Press the Enter Key on the Numeric Keypad

Define and Enable Track 2 Header:

Press V

Press 6

Press ;

Press the Enter Key on the Numeric Keypad

Define and Enable Track 1 Terminator:

Press W

Press 5

Press ?

Press the Enter Key on the Numeric Keypad

Define and Enable Track 2 Terminator:

Press W

Press 6

Press ?

Press the Enter Key on the Letter Keypad

Press the Enter Key on the Numeric Keypad

Press <spacebar> to exit the menu entry screen

Note: Extra Functions

Keyboard Chirp

Press Z

Press 3

Press Y or N (Y=on N=off)