

UPC-A

The following options apply to the UPC-A symbology.

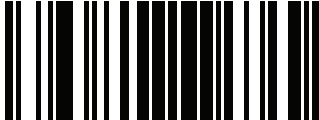
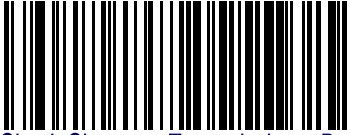
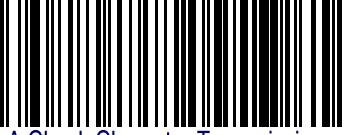

UPC-A Enable/Disable

When disabled, the reader will not read UPC-A barcodes.

 ENTER/EXIT PROGRAMMING MODE	
	 UPC-A = Disable
 UPC-A = Enable	 DEFAULT

UPC-A Check Character Transmission

Enable this option to transmit the check character along with UPC-A barcode data.

 ENTER/EXIT PROGRAMMING MODE	
	 UPC-A Check Character Transmission = Don't Send
 UPC-A Check Character Transmission = Send	 DEFAULT