

UPC-E

The following options apply to the UPC-E symbology.

UPC-E Enable/Disable

When disabled, the reader will not read UPC-E barcodes.



UPC-E Check Character Transmission

Enable this option to transmit the check character along with UPC-E barcode data.

